

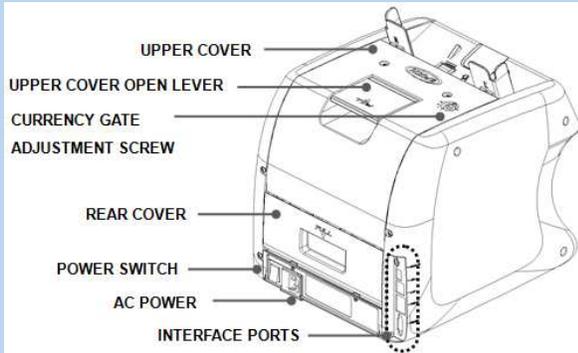


## MiB-11V Exterior Description

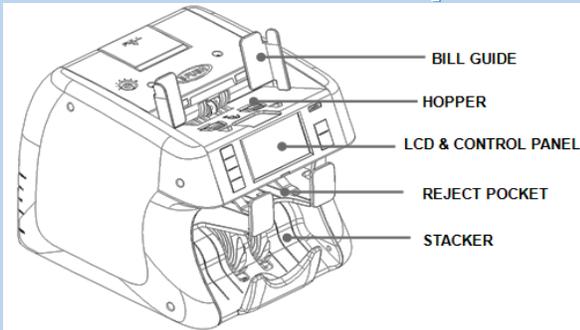

### ➤ How to place Banknotes onto Hopper ↻

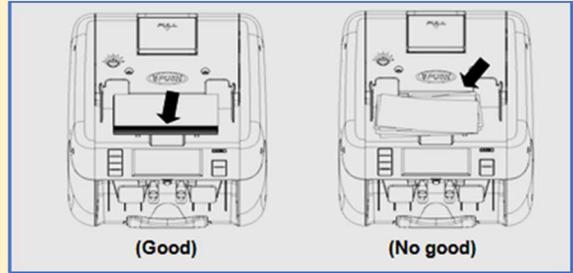

- ❶ Align banknotes nicely on each edge and place them in the Note hopper.
- ❷ Adjust Note guides to the dimension of your banknotes.

### ➤ How to open and close Upper Cover ↻




- Insert your fingers inside the tab and lift-up the Upper cover.
- Press hard on the "PUSH" area (on top) to close the cover.

### ➤ Know important keys on Control Panel

<b>CHANGE</b>	See various counting results	<b>START STOP</b> Start/Stop/SAVE
<b>MENU</b>	User- Menu setting	
<b>MODE</b>	Select Counting Modes	
<b>PRINT</b>	To Print Various Count results	

### ➤ How to select Automatic (Default) or Manual Count?

Press [MENU] key → Count Interface → Start Counting → Touch on Manual. If Manual Start is selected, top indicator will show . Auto Start is Default.

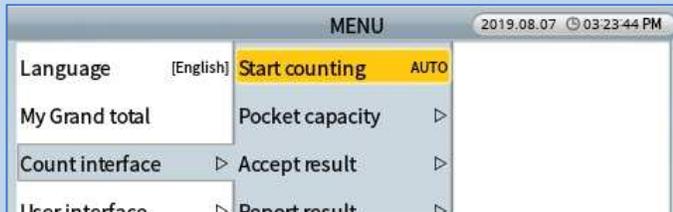

### ➤ How to switch to different counting modes?

Press [MODE] key on the Control Panel to switch from MIX (Default) → SINGLE → SORT → FACE → ORIENT... OR,

Touch these currency Symbol or on touch screen to switch to different Counting (Discriminating) and Sorting (directions) modes.

### ➤ Know Important Symbols on Touch Screen:



Touch Screen Icons	Name
	Indicators on top of the screen
	Manual Start Icon
	Counterfeit Icons
	Customer Preferred Mode
	Currency selection Icon
	Dual-Users "ON" indication
	Date & Time (Can be reset)
	Alternative way of MODE setting Icons to reach various Modes.
	Function Setting Icons, such as Add, Batch, Manual Input and Manual Accept of results.
	Information Icon

➤ How to switch to Multi-currency Count operation (if multi-currencies software is purchased)

Touch  country flag on screen to select multi-currencies option. MIX (will process mixture); AUTO (will separate them).



➤ Mixture currencies will be counted in Single-Pass.  
Press  CHANGE key for count results on all currencies or press PRINT Key to print.

➤ How to Auto-Print Receipt to a printer?  
User can set up Automatic printing of count result receipt by choosing Auto Printing ON. Machine will start printing as soon as banknotes are removed from Stacker.

MENU → Count Interface → Report Result → Auto-Print ON

➤ How to view 'The Day Total', & 'Grand Total'

Press MENU Key → My Grand Total → To Print



➤ How to Batch by Qty or by Amount (\$)

MiB-11V allows users to select counting of banknotes by preset batch number (5, 10, 20, 25, 50, 100, 200 etc) or by a specific Qty by Amount (\$). Press  to access Batch menu. Start/Stop to save.



➤ How to activate ADD function?


 ADD function is to provide a cumulative count of continuous operation (multiple stack or banknotes) of processing banknotes.

Touch  and select ADD to activate and Save count manually by touching  after a count is completed. Count results will then add to 'The Day Total' and 'Grand Total'.

➤ How to set and activate Denomination Batch (DB) for each denomination.


To process each denomination of banknotes by a fixed batch number (apply to SINGLE, FACE, SORT).

Setting: Touch Batch key → Denom Batch(DB). By default, all denominations are set to 100. To change, touch each of the denomination and Count and make your changes and SAVE.

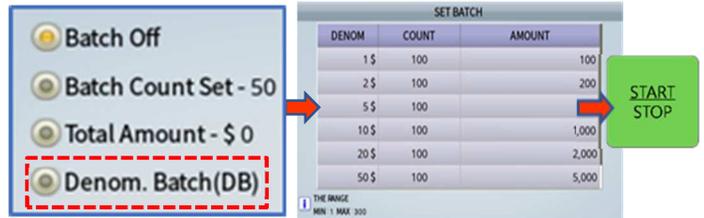

➤ How to perform Manual INPUT for non-recognized genuine bills in reject pocket.

Prior removing bills from Stacker pocket, by touching [INPUT] icon on Touch Screen, user can see INPUT VALUE screen and can add uncounted banknotes to total count result. Once Manual INPUT is done, Press START / STOP accept results to Total instantly.

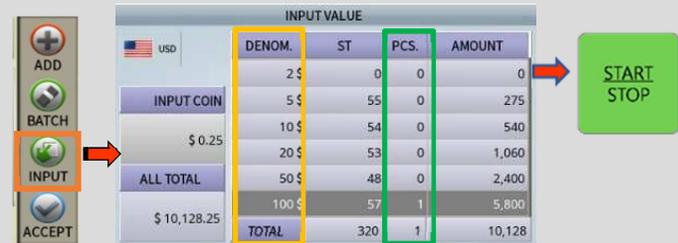

➤ Important Counting Modes and explanation:



**MIX (As Default Mode)**

When Mix mode is selected, Machine will count and denominate mixture denomination of banknotes.



**SINGLE**

Machine counts and delivers first detected genuine banknotes as standard to Stacker and delivers rest to Reject Pocket.



**SORT (for Organized Strap)**

Machine processes organized denominations in a strap of banknotes (Strap banknotes from POS cash drawers).



**FACE (Direction)**

Machine delivers first detected Face of banknote to Stacker and deliver reverse to Reject Pocket. Using [ORIENT] mode, user can also perform ORIENTATION for Faced banknotes.